


brandeismakerlab

# How to replace the pancakebot pump

This guide will show you how to replace the pancakebot's pump if it's broken.

Written By: Talya Erbil

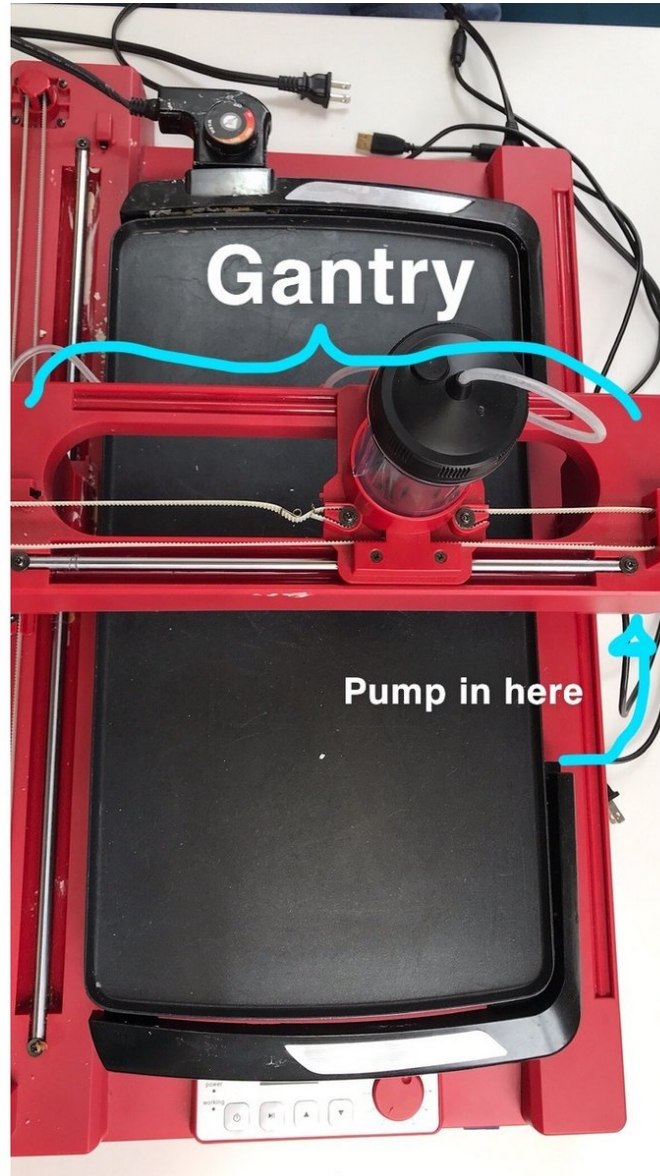




## TOOLS:

- [Screwdriver](#) (1)
-

## Step 1 — How to replace the pancakebot pump

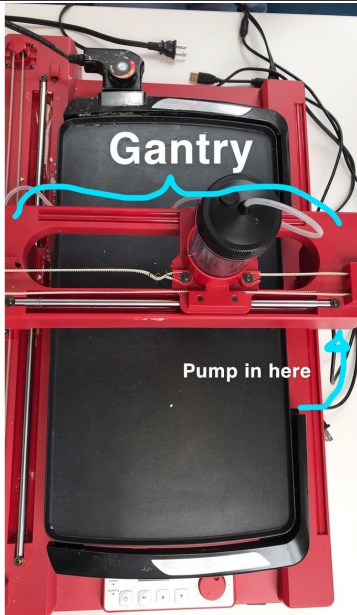

- top view of the pancake bot

## Step 2



- Insert wisdom here.

### Step 3

**Take of the cover  
of the grey cable**



- Insert wisdom here.

### Step 4

**Unplug the cable**



- Insert wisdom here.

## Step 5




- Insert wisdom here.

## Step 6




- Insert wisdom here.

## Step 7

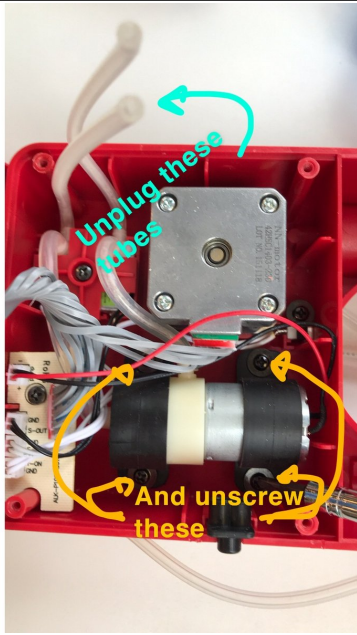


- Insert wisdom here.

## Step 8

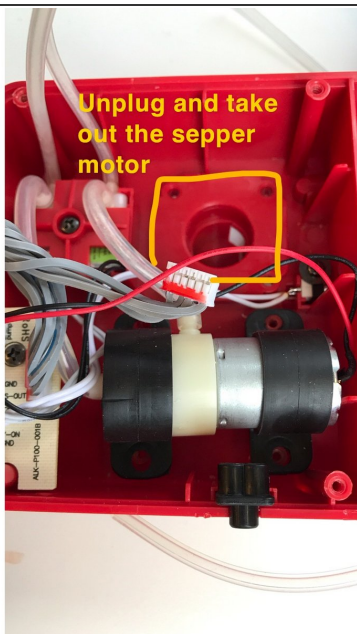


- Insert wisdom here.

## Step 9

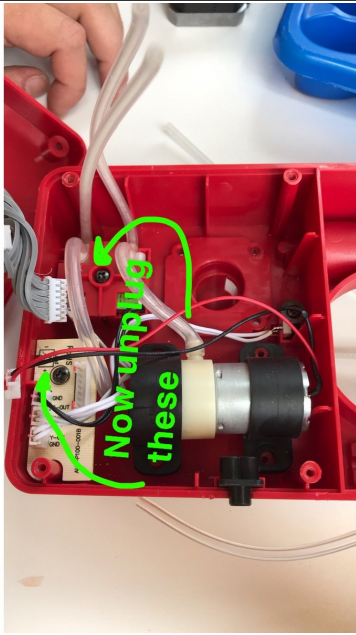

- Insert wisdom here.

## Step 10

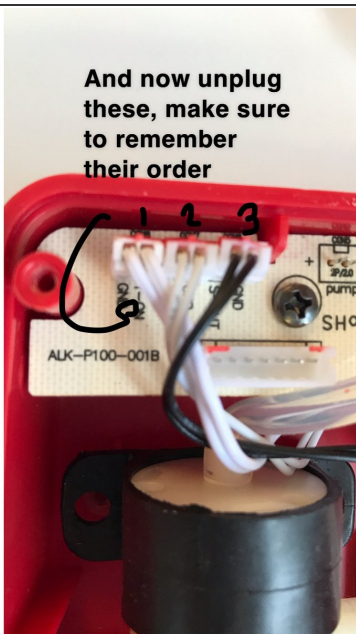

- Insert wisdom here.

## Step 11



- Insert wisdom here.

## Step 12



- Insert wisdom here.

## Step 13




- Insert wisdom here.

## Step 14



- Insert wisdom here.

## Step 15

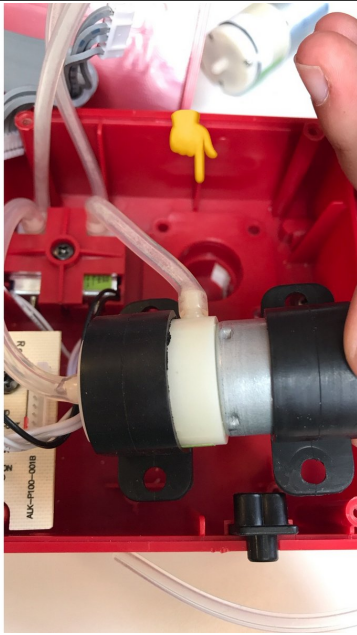

- Insert wisdom here.

## Step 16



- Insert wisdom here.

## Step 17




- Insert wisdom here.

## Step 18



- Insert wisdom here.

## Step 19

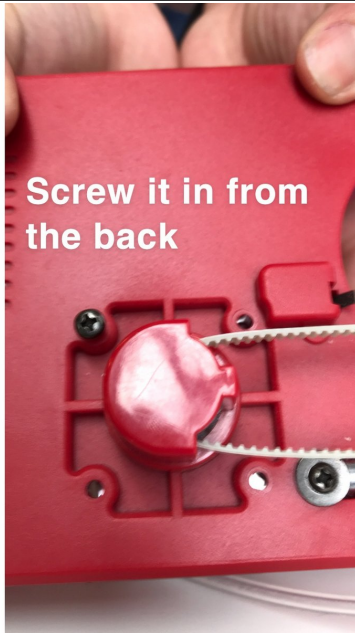

- Insert wisdom here.

## Step 20



- Insert wisdom here.

## Step 21



- Insert wisdom here.

## Step 22



- Insert wisdom here.

## Step 23



- Insert wisdom here.

## Step 24



- Insert wisdom here.